




# **COMPONENT LOCATOR**

**for the**

## ***Kodak X-Omat 480 RA PROCESSOR***

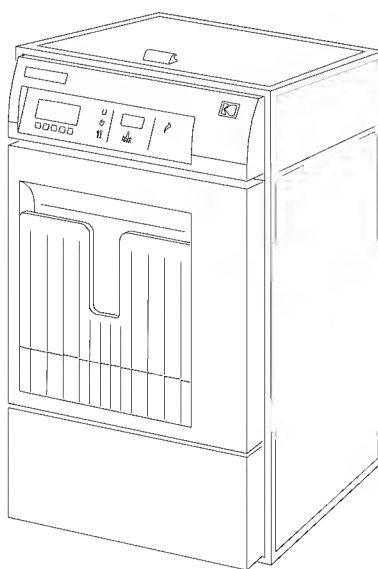

H108\_0318BA

#### PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

#### CAUTION



This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

## Table of Contents

Description	Page
<b>Component Lists</b> .....	3
Battery - BT .....	3
Circuit Breaker - CB .....	3
Capacitor - C .....	3
Circuit Board - Bd .....	3
Connectors J and P .....	3
Film Counter Assembly .....	4
Filters - FL .....	4
Fuses - F .....	4
Ground Point - E .....	4
Integrated Circuits - U .....	4
Level Probes .....	4
Motors - B .....	5
Power Supply - A .....	5
Pumps - See Motors .....	5
R/C Network - ED-A2 .....	5
Relays - K .....	5
Resistors - R .....	5
Sensors/Switches - S .....	6
Solenoids - L .....	6
Solid State Relays - SSR .....	6
Terminal Blocks - TB .....	6
Transformers - T .....	6

## Component Lists

### Battery - BT

	Page
BT501 Battery.....	11

### Circuit Breaker - CB

	Page
CB1 Main Power, 35 amp .....	8, 13
CB2 Auxiliary, 10 amp.....	8, 12, 18
CB3 Auxiliary, 15 amp.....	8, 12, 18
CB4 Auxiliary, 10 amp.....	8, 12, 18

### Capacitor - C

	Page
C1 Motor Capacitor .....	16

### Circuit Board - Bd

	Page
200 Bd Feed-End Display and Control .....	8, 13
350 Bd Control Panel and Display.....	7, 14
500 Bd Microprocessor.....	9, 11
5600 Bd Film Accumulator .....	15

### Connectors - J and P

	Page
J1 Safelight Outlet .....	8, 13
J39 Electrical Box PIC Connector .....	9
J100 Control Voltages for Fixer Manager .....	9, 10
J204 Processor Interface Connector (PIC) .....	8, 13
P/J2 AC Voltages from Transformer Box.....	9, 10
P/J3 Exhaust Fan Motor, Developer and Fixer Replenishment Pumps.....	10
P/J4 Dryer Heaters .....	9, 10
P/J5 Dryer Blower Motor .....	9, 10
P/J6 Fixer Heater.....	9, 10
P/J7 Recirculation Pump Motor.....	9, 10
P/J8 Developer Heater .....	9, 10
P/J9 16 V ac to 200 Circuit Board .....	9, 10
P/J10 Input Wash Solenoid/Cooling Dump Solenoid.....	9, 10
P/J11 Interface Connector.....	8, 13
P/J12 Developer Thermistor .....	10
P/J13 Fixer Thermistor .....	10
P/J14 5600 Circuit Board .....	9, 10
P/J15 Level Probes, Switches S5 and S6 .....	9, 10
P/J17 Dryer Thermistor .....	9, 10
P/J18 ESD Wrist Strap Ground.....	9, 10
P/J40 Power .....	12
P/J41 Connector/Diode Assembly .....	18
P/J42 Connector/Diode Assembly.....	17
P/J351 350 Circuit Board to 500 Circuit Board.....	14
P/J352 Soft Keys to 350 Circuit Board .....	14
P/J353 350 Circuit Board to LCD A3 Backlight .....	14
P/J354 350 Circuit Board to LCD A3 .....	14

### Connectors - J and P

P/J355 350 Circuit Board to Fan.....	14
P/J356 350 Circuit Board Fan.....	14
P/J501 Power from Quad Power Supply A1.....	11
P/J502 AC enables.....	11
P/J503 Developer, Fixer, and Dryer Thermistors .....	11
P/J504 Solenoids L1 and L2, and M1.....	11
P/J505 Level Probes, Switches S5 and S6, and SSRs .....	11
P/J506 To 350 Circuit Board.....	11
P/J507 To 200 Circuit Board.....	11
P/J508 To 5600 Circuit Board.....	11
P/J509 Electrical Box PIC Connector .....	11
P/J5601 5600 Circuit Board connect to 500 Circuit Board.....	15

### Film Counter Assembly - M

	Page
M1 Counter .....	9

### Filters - FL

	Page
FL1 EMI Filter.....	12
FL2 EMI Filter.....	12
FL3 EMI Filter.....	12
FL4 EMI Filter.....	12
FL5 EMI Filter.....	9

### Fuses - F

	Page
F1 Protect T2 Transformer, 0.25 A .....	9, 10
F2 24 V dc to DC Motor Controller A2, 2.5 A .....	9, 10
F3 Accessory/Safelight, 2 A .....	12
AIF1 Fuse on A1 Quad Power Supply, 5 A.....	9

### Ground Point - E

	Page
E1 Main Ground .....	12

### Integrated Circuits - U

	Page
U12 5600 Circuit Board Bootstrap .....	15
U17 500 Circuit Board Language.....	11
U18 500 Circuit Board Language.....	11
U19 500 Circuit Board Main Program.....	11
U20 500 Circuit Board, Bootstrap .....	11

### Level Probes

	Page
R67 Red, Developer Level Sensor .....	19
K41 Black, Common (return).....	19
G41 Green, Common (return) .....	19
W66 White, Fixer Level Sensor .....	19

## **Motors - B**

	Page
B1 Dryer Blower .....	8
B2 Exhaust Fan .....	21
B3 Developer Replenish Pump .....	7, 8
B4 Fixer Replenish Pump .....	7, 8
B5 Recirculation Pump .....	8, 16
B6 DC Drive .....	8
B10 Fan .....	14

## **Power Supply - A**

	Page
A1 Quad Power Supply .....	9
A2 DC Motor Controller .....	9
A3 LCD Display .....	7, 14

## **Pumps - See Motors**

## **R/C Network - ED-A2**

	Page
ED-A2 Snubber .....	9

## **Relays - K**

	Page
K8 Dryer Blower Motor .....	9
K501 Not Used .....	11
K502 Dryer Blower Motor .....	11
K503 Recirculation Pump Motor .....	11
K504 Developer and Fixer Heater .....	11
K505 Safelight Receptical .....	11
K506 Not Used .....	11

## **Resistors - R**

	Page
R1 Dryer Heater, 1550 W .....	20
R2 Dryer Heater, 1550 W .....	20
R3 Developer Heater, 1000 W .....	17
R4 Fixer Heater, 1200 W .....	17
R5 Dryer Thermistor .....	7
R6 Developer Thermistor .....	17
R7 Fixer Thermistor .....	17
R209 Display Intensity .....	8
R5644 Alarm Volume .....	8

## Sensors/Switches - S

	Page
S1 Left Entrance Switch .....	15
S2 Right Entrance Switch.....	15
S5 Replenish Calibrate Switch .....	7
S6 Top Cover Interlock Switch.....	8
S7 Dryer Overtemperature Thermostat.....	20
S502 Reset Microprocessor Button.....	11
S351 Display Panel Soft Key 1.....	7
S352 Display Panel Soft Key 2.....	7
S353 Display Panel Soft Key 3.....	7
S354 Display Panel Soft Key 4.....	7
S355 Display Panel Soft Key 5.....	7

## Solenoids - L

	Page
L1 Water Input Solenoid.....	18
L2 Developer Cooling/Dump Solenoid .....	17

## Solid State Relays - SSR


	Page
SSR - U1 Dryer Heater .....	9
SSR - U2 Developer Heater.....	9
SSR - U3 Developer Replenishment Pump.....	9
SSR - U4 Fixer Replenishment Pump .....	9
SSR - U5 Fixer Heater .....	9

## Terminal Blocks - TB


	Page
TB1 Main Power.....	12
TB2 Power Selection.....	12
TB3 Dryer Power .....	12
TB4 AC Distribution .....	9
TB5 DC Distribution.....	9

## Transformers - T

	Page
T1 Primary Power Buck/Boost .....	12
T2 Step Down, 16 V ac.....	9

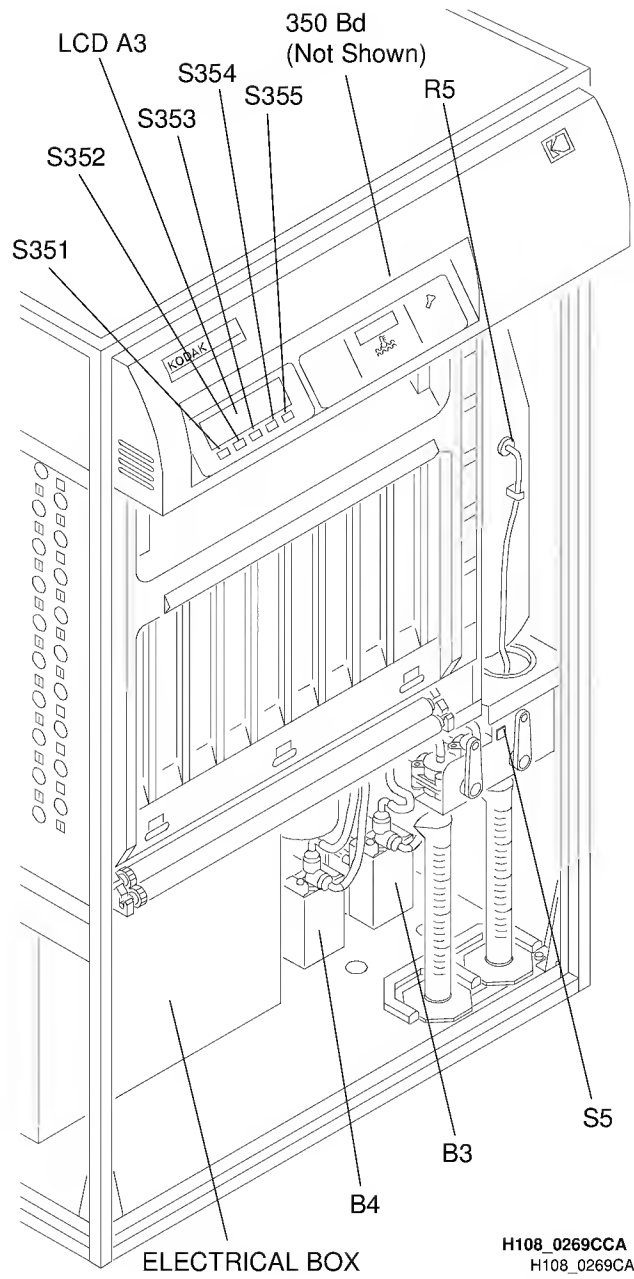


**Figure 1 Receive-End of Processor**

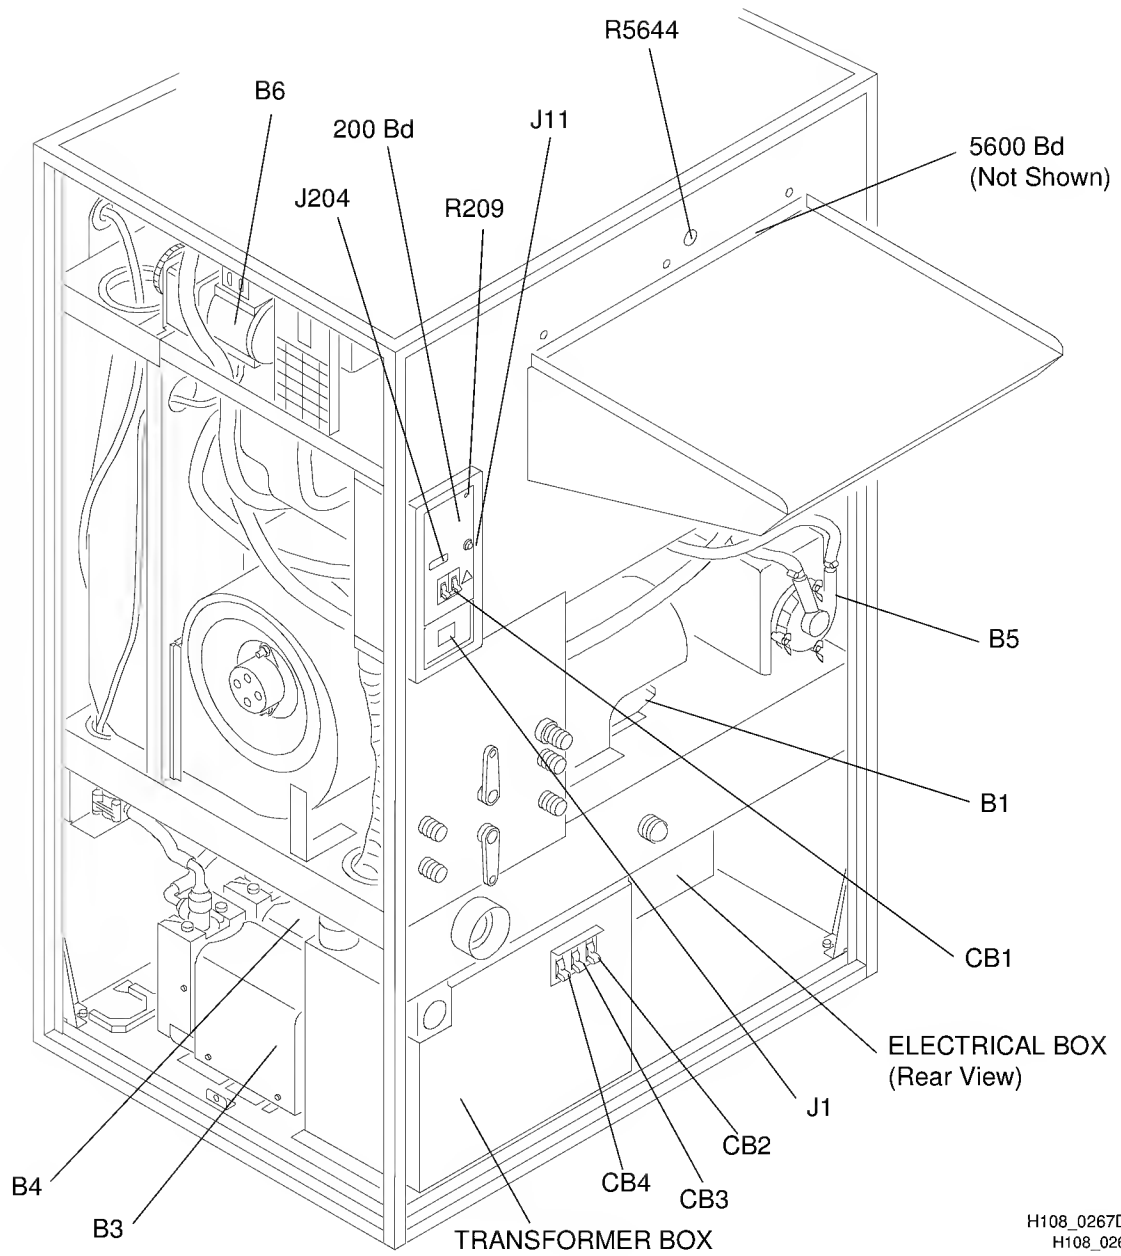


H108\_0267DCB  
H108\_0267DA

**Figure 2 Feed-End of Processor**



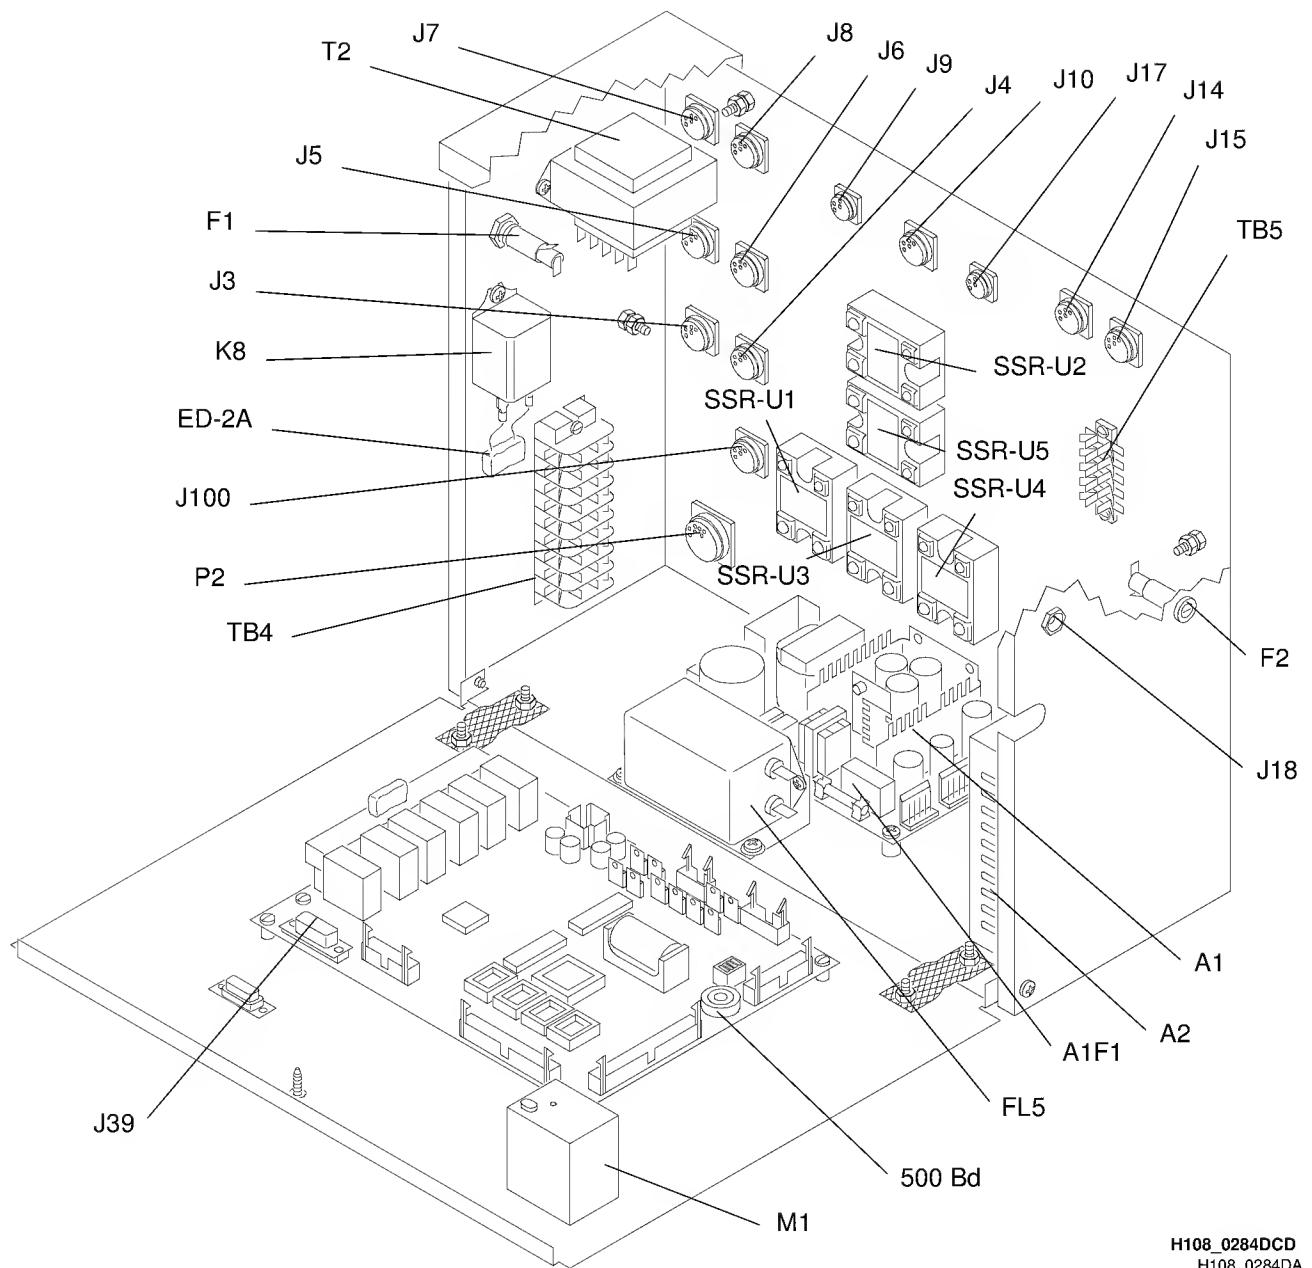


**Figure 3 Electrical Box**

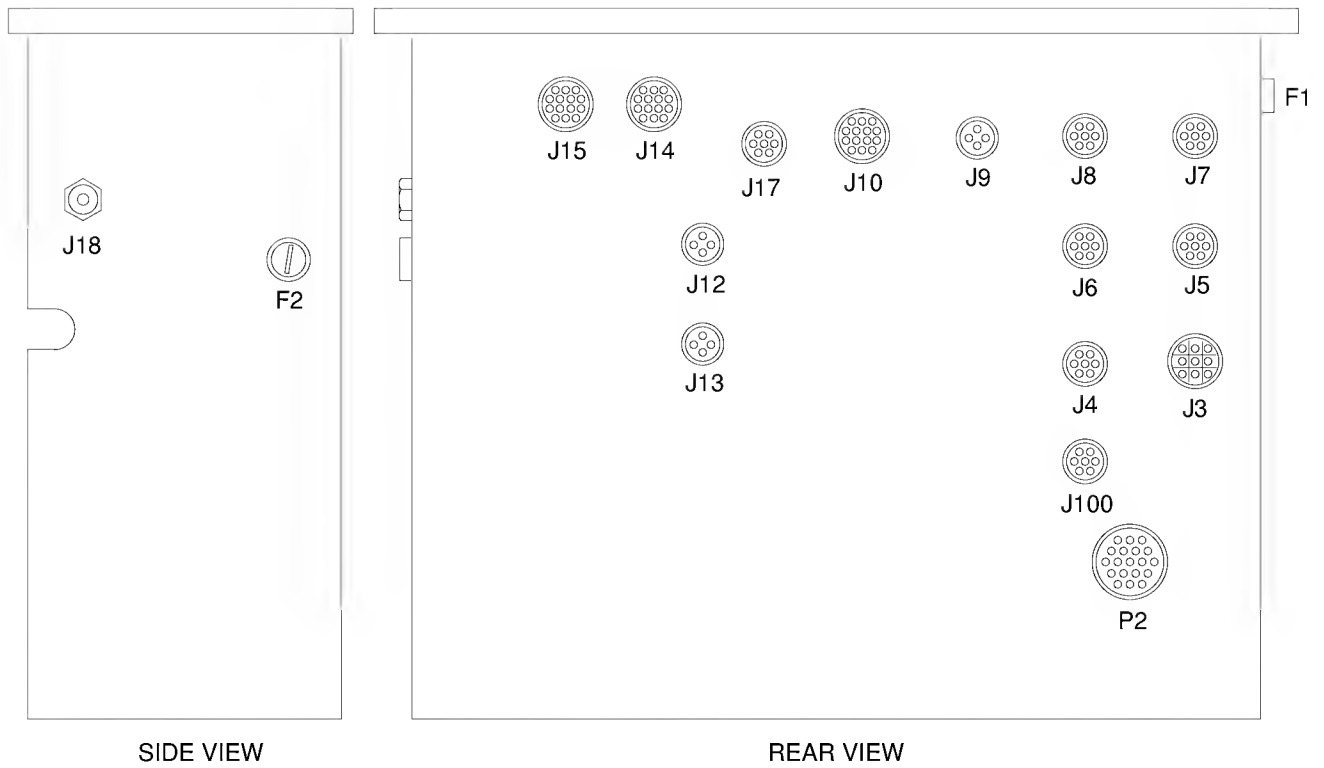


H108\_0283DA

**Figure 4 Electrical Box (Exterior)**

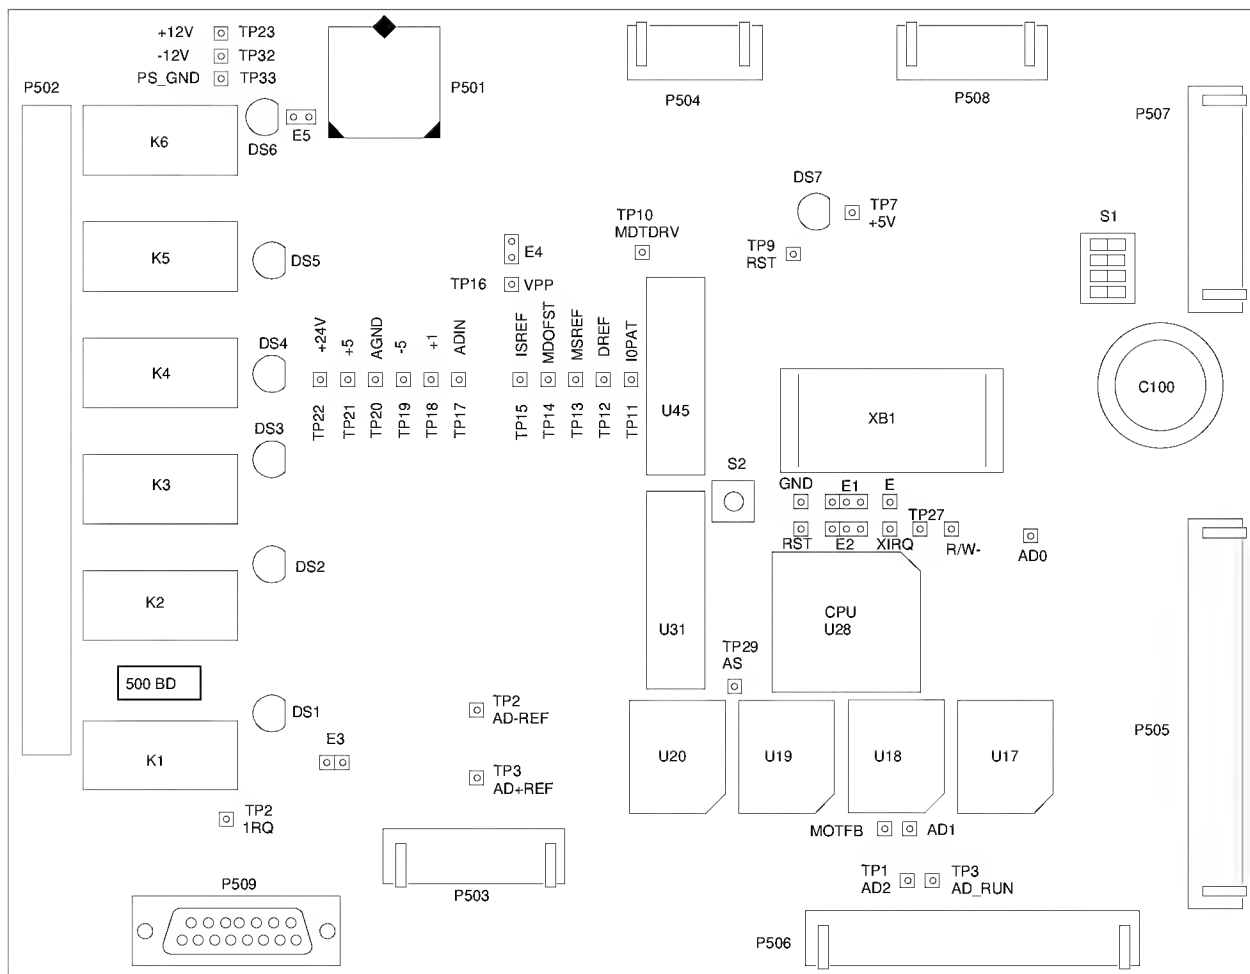


H108\_0285DA

Figure 5 500 Circuit Board

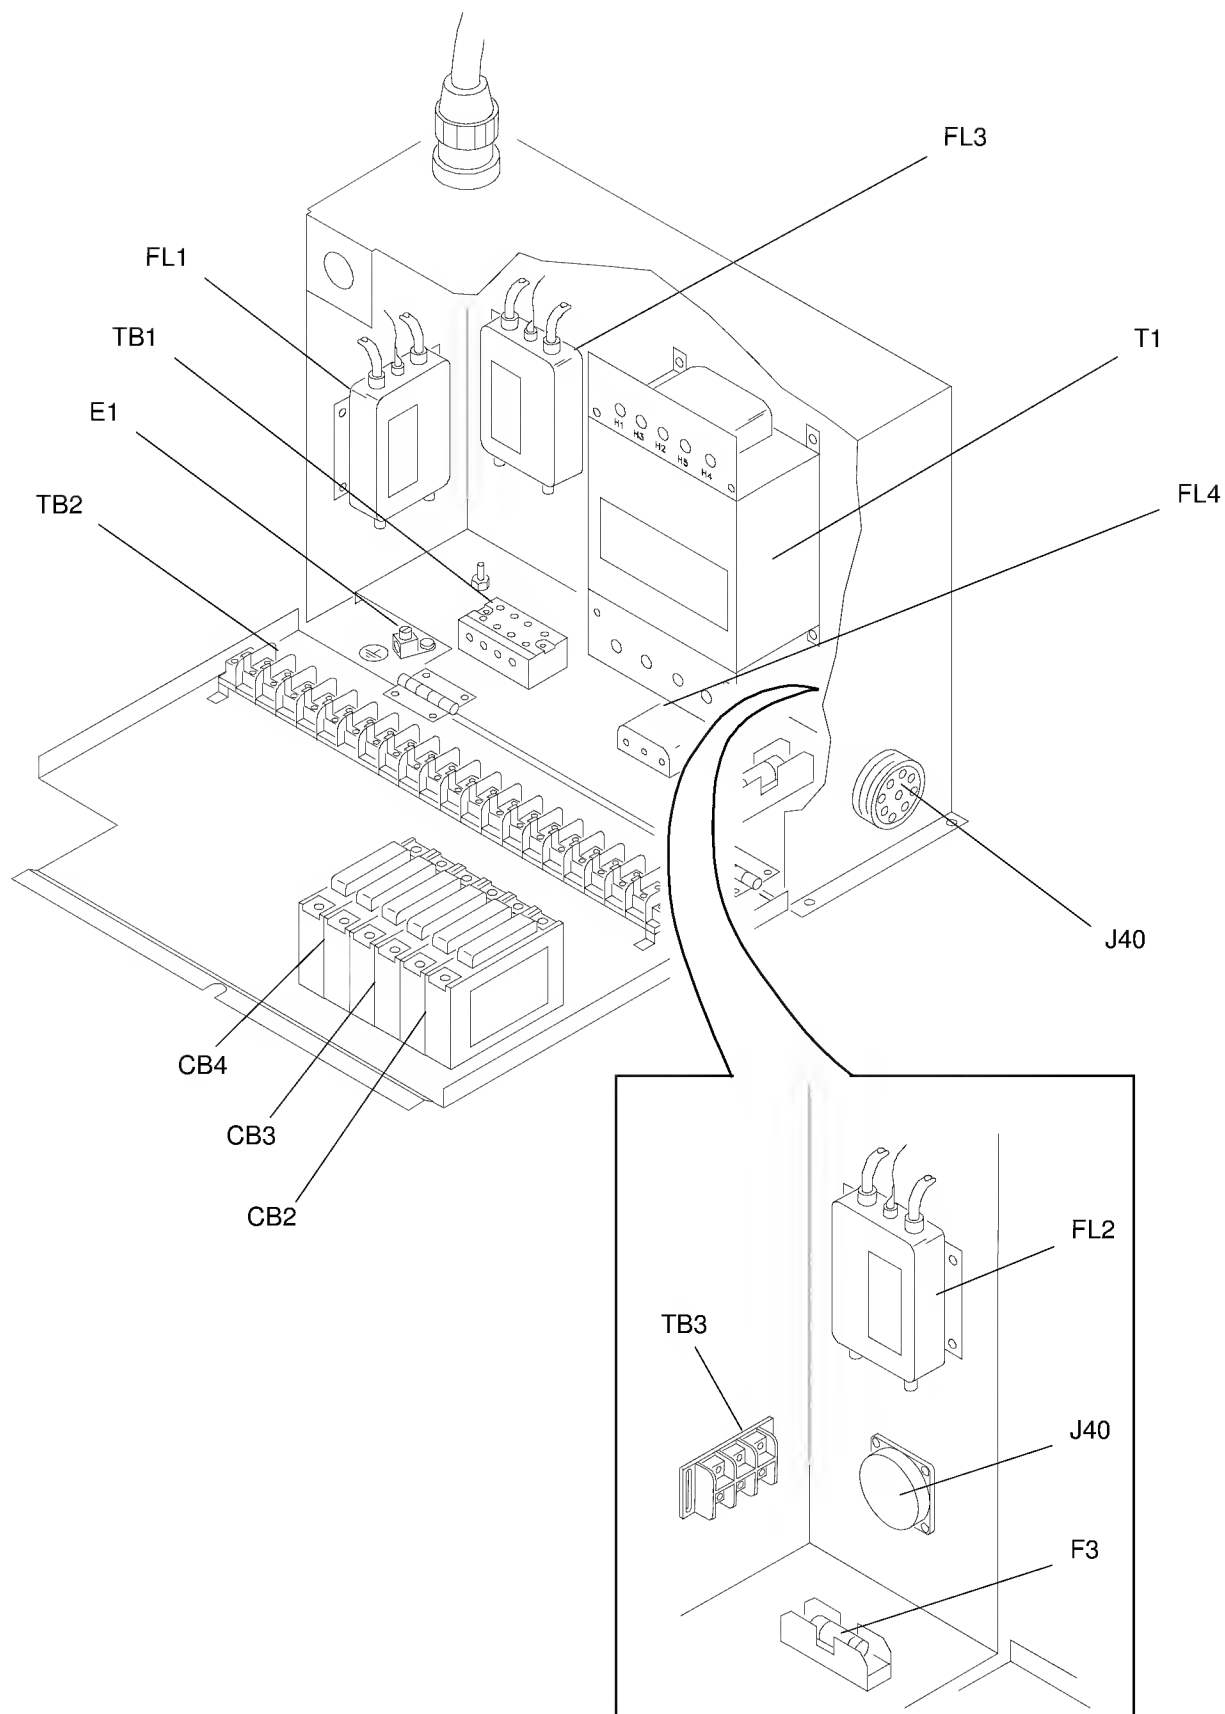


H108\_0046ECC  
P108\_0046EA

Figure 6 Transformer Box

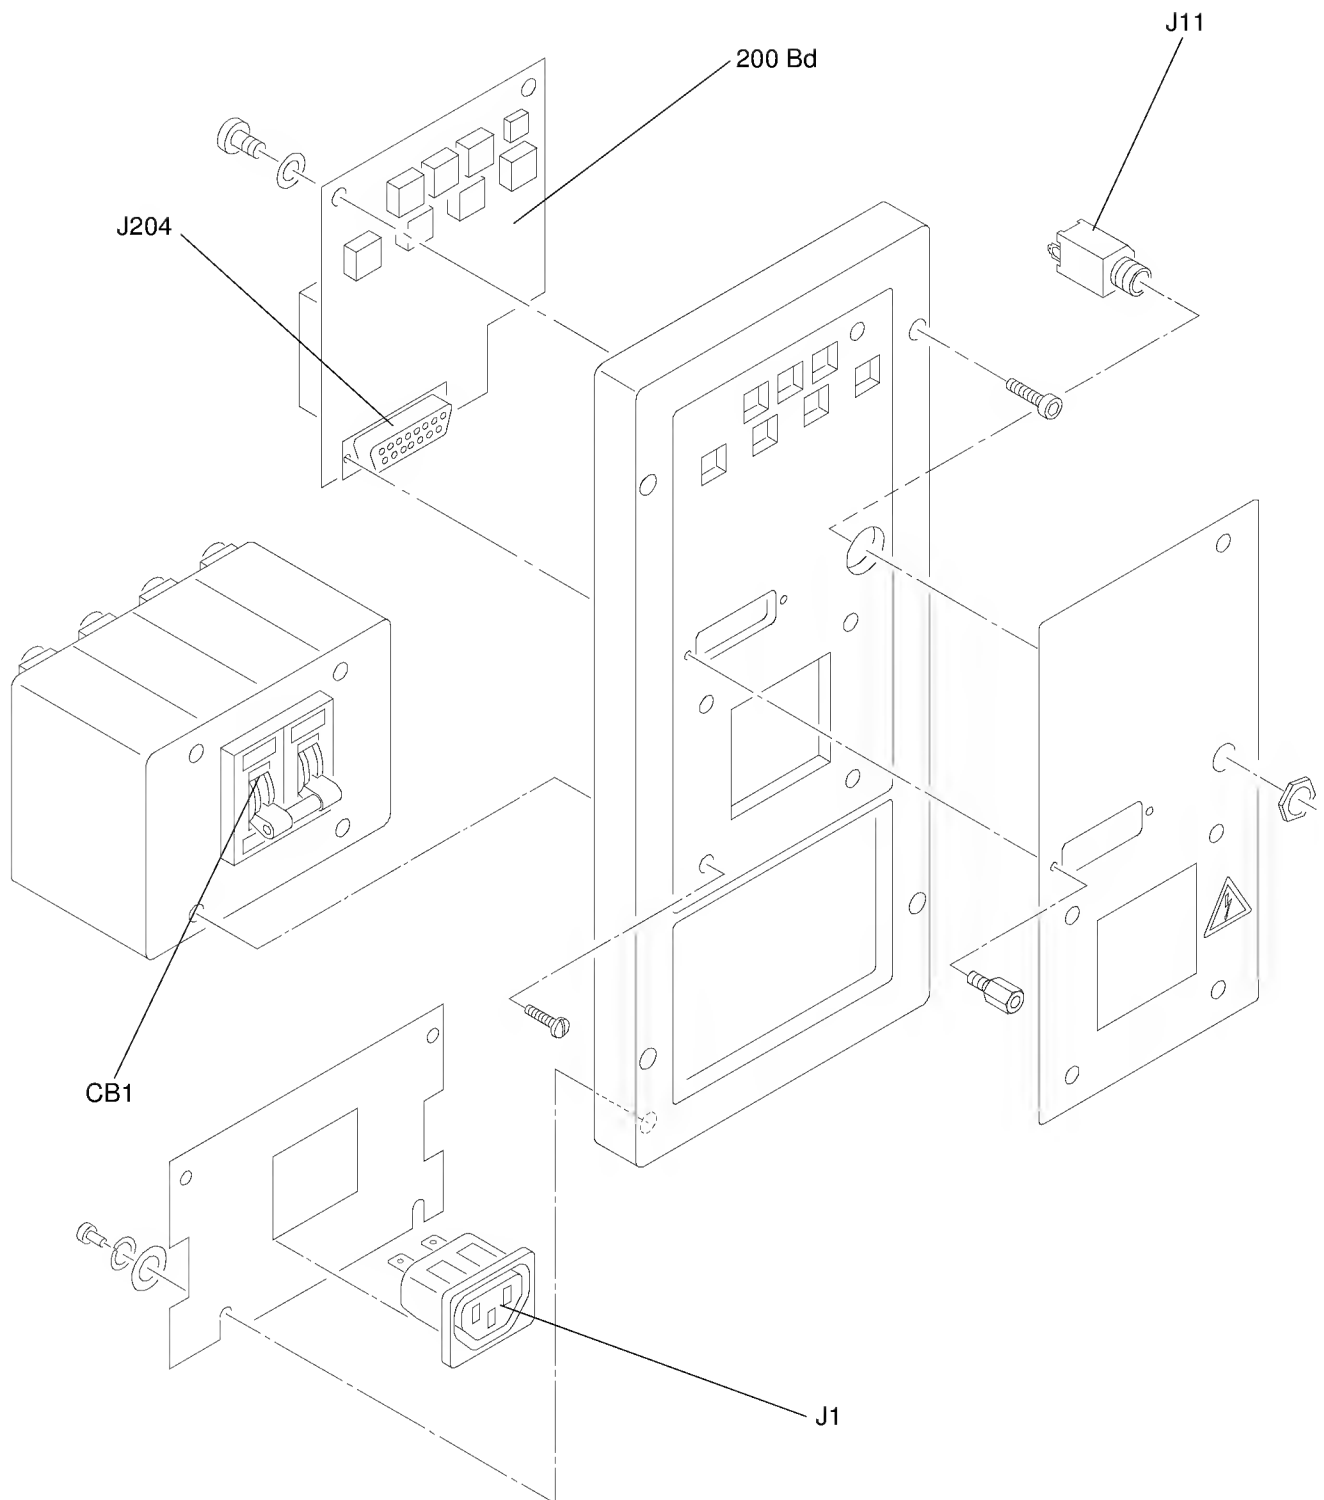


H108\_0254ECA  
H108\_0254EA

**Figure 7 200 Circuit Board Assembly**

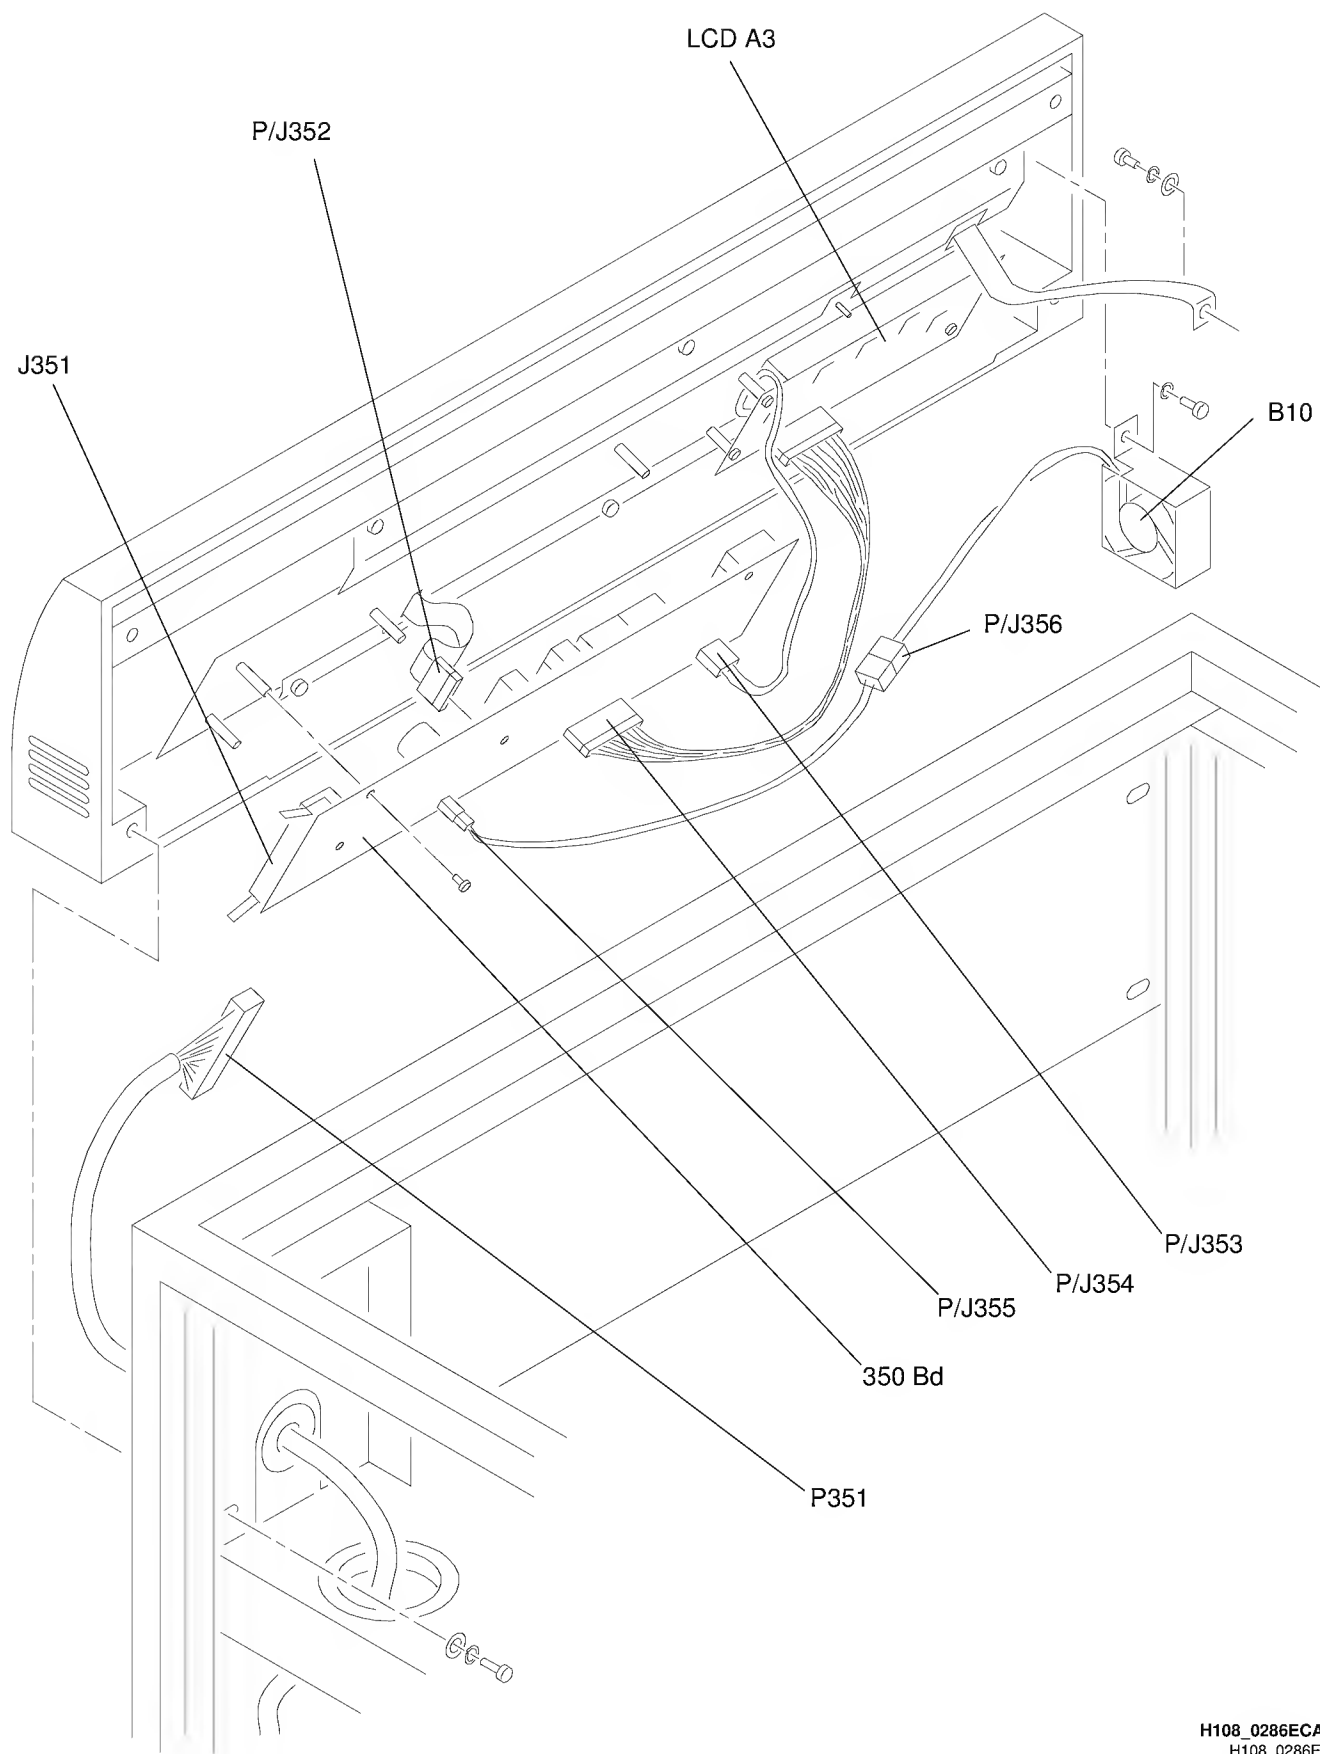


H108\_0286ECA  
H108\_0286EA

**Figure 8 350 Circuit Board Assembly**

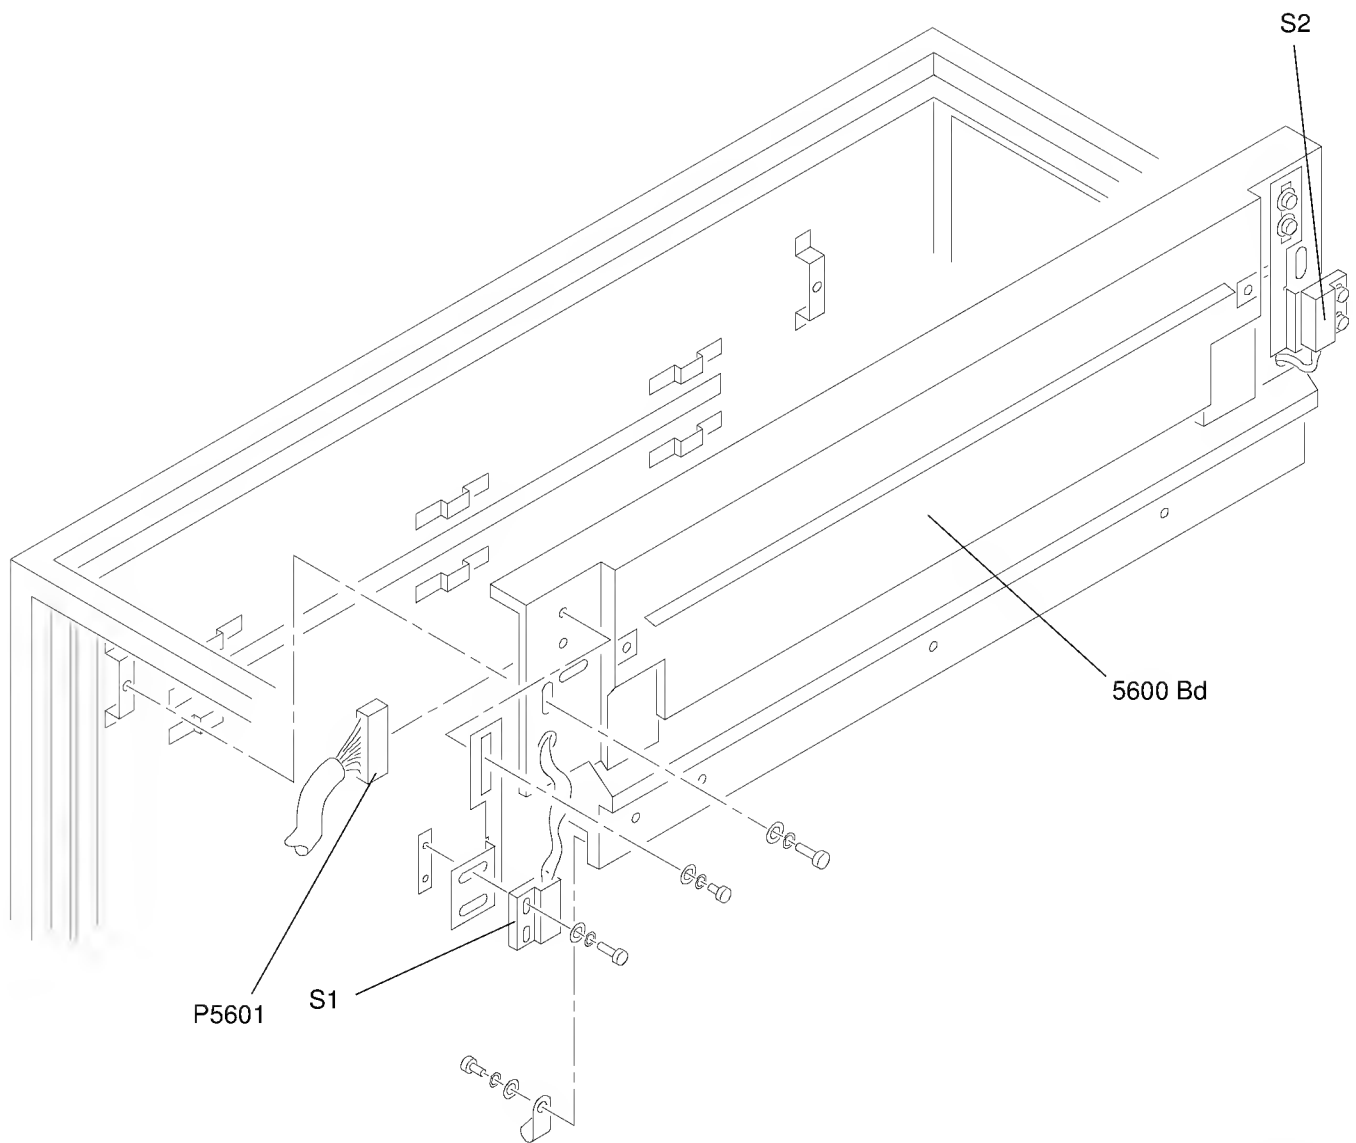

H108\_0279DCD  
H108\_0279DA


**Figure 9 5600 Circuit Board Assembly**

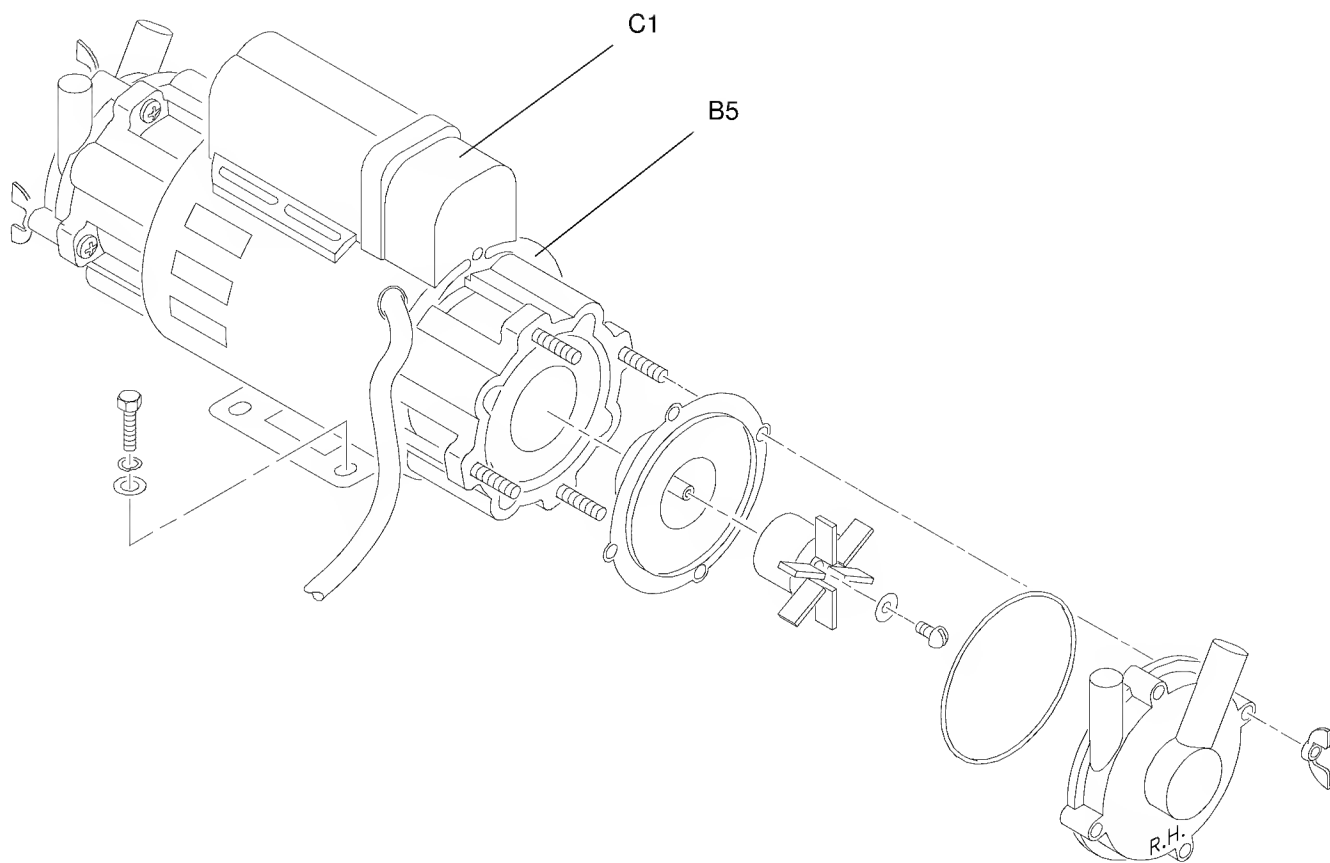

H108\_0040DCD  
H108\_0040DA


**Figure 10 Recirculation Pump Motor**



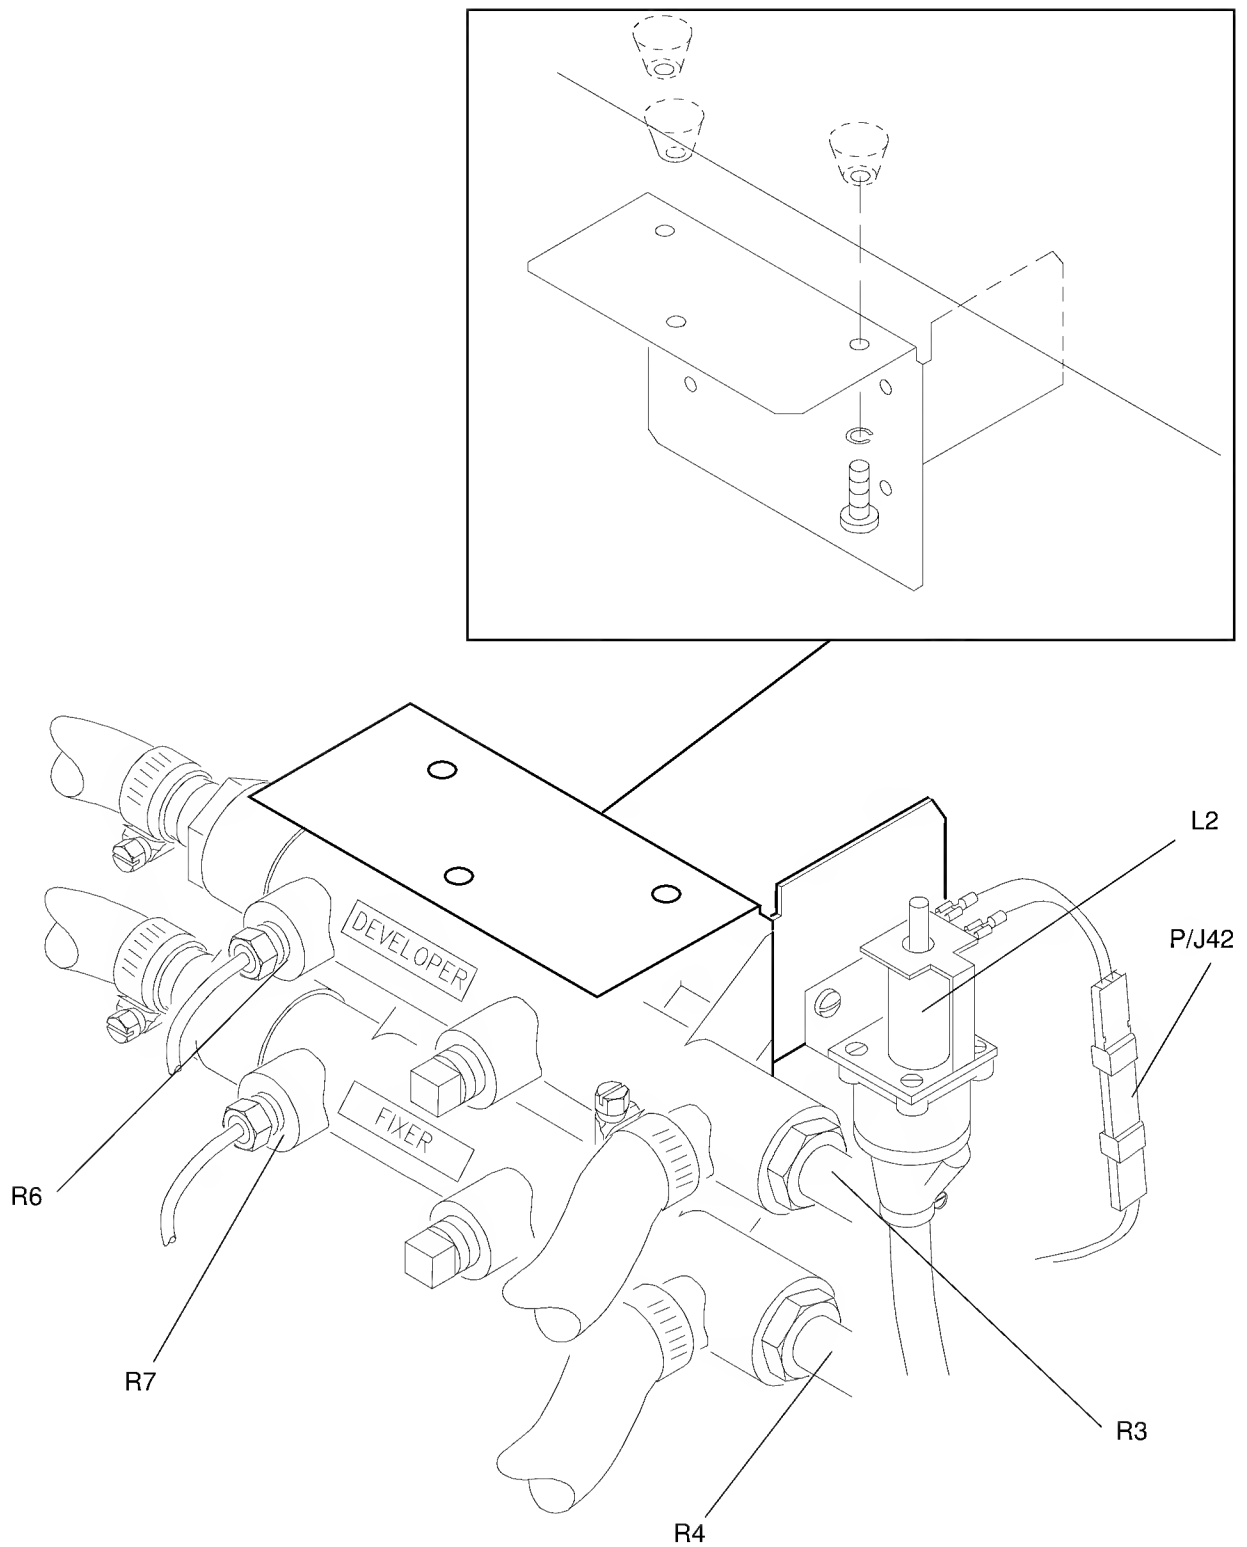


H108\_0157ECC  
H108\_0157EA

**Figure 11 Thermowell/Water Dump Solenoid Assemblies**

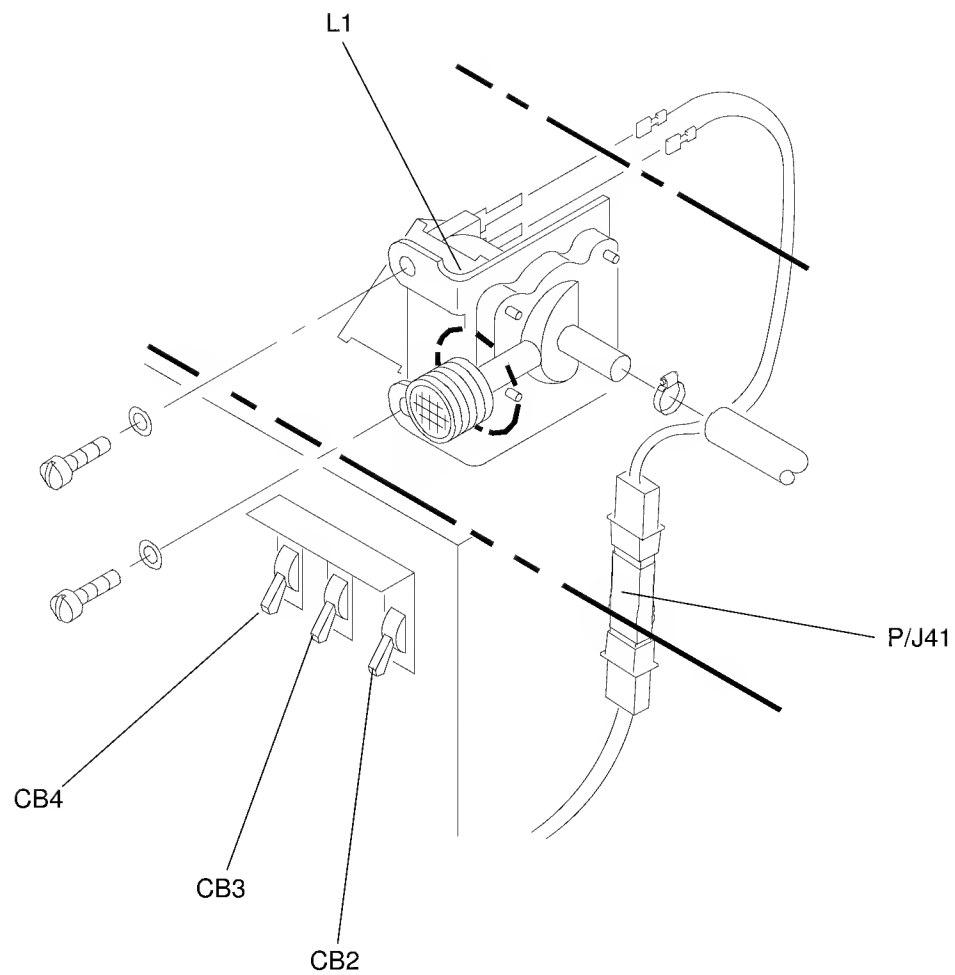


H108\_0153DCB  
H108\_0153DC

**Figure 12 Input Water Solenoid Assembly**

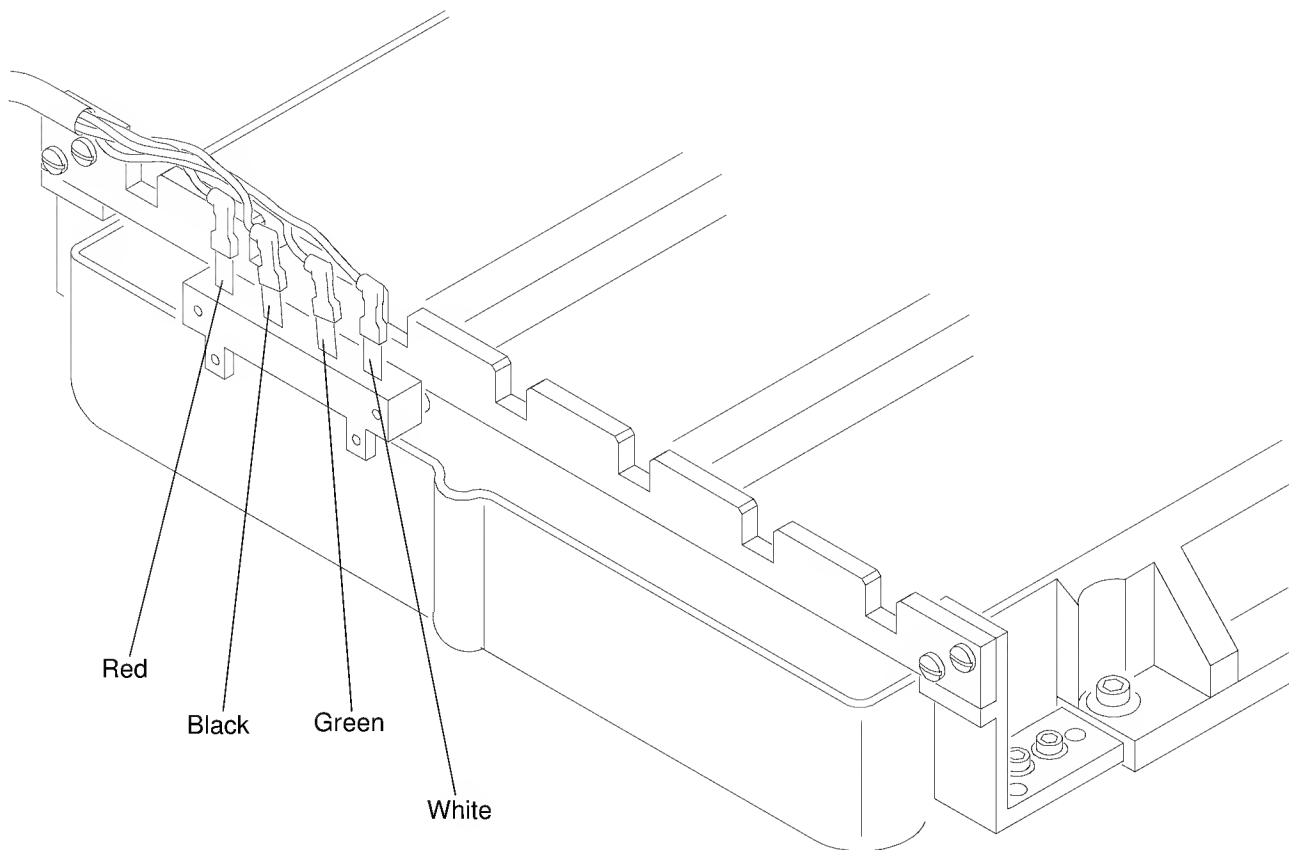


H108\_0273DCB  
H108\_0273DA

**Figure 13 Level Sensing**

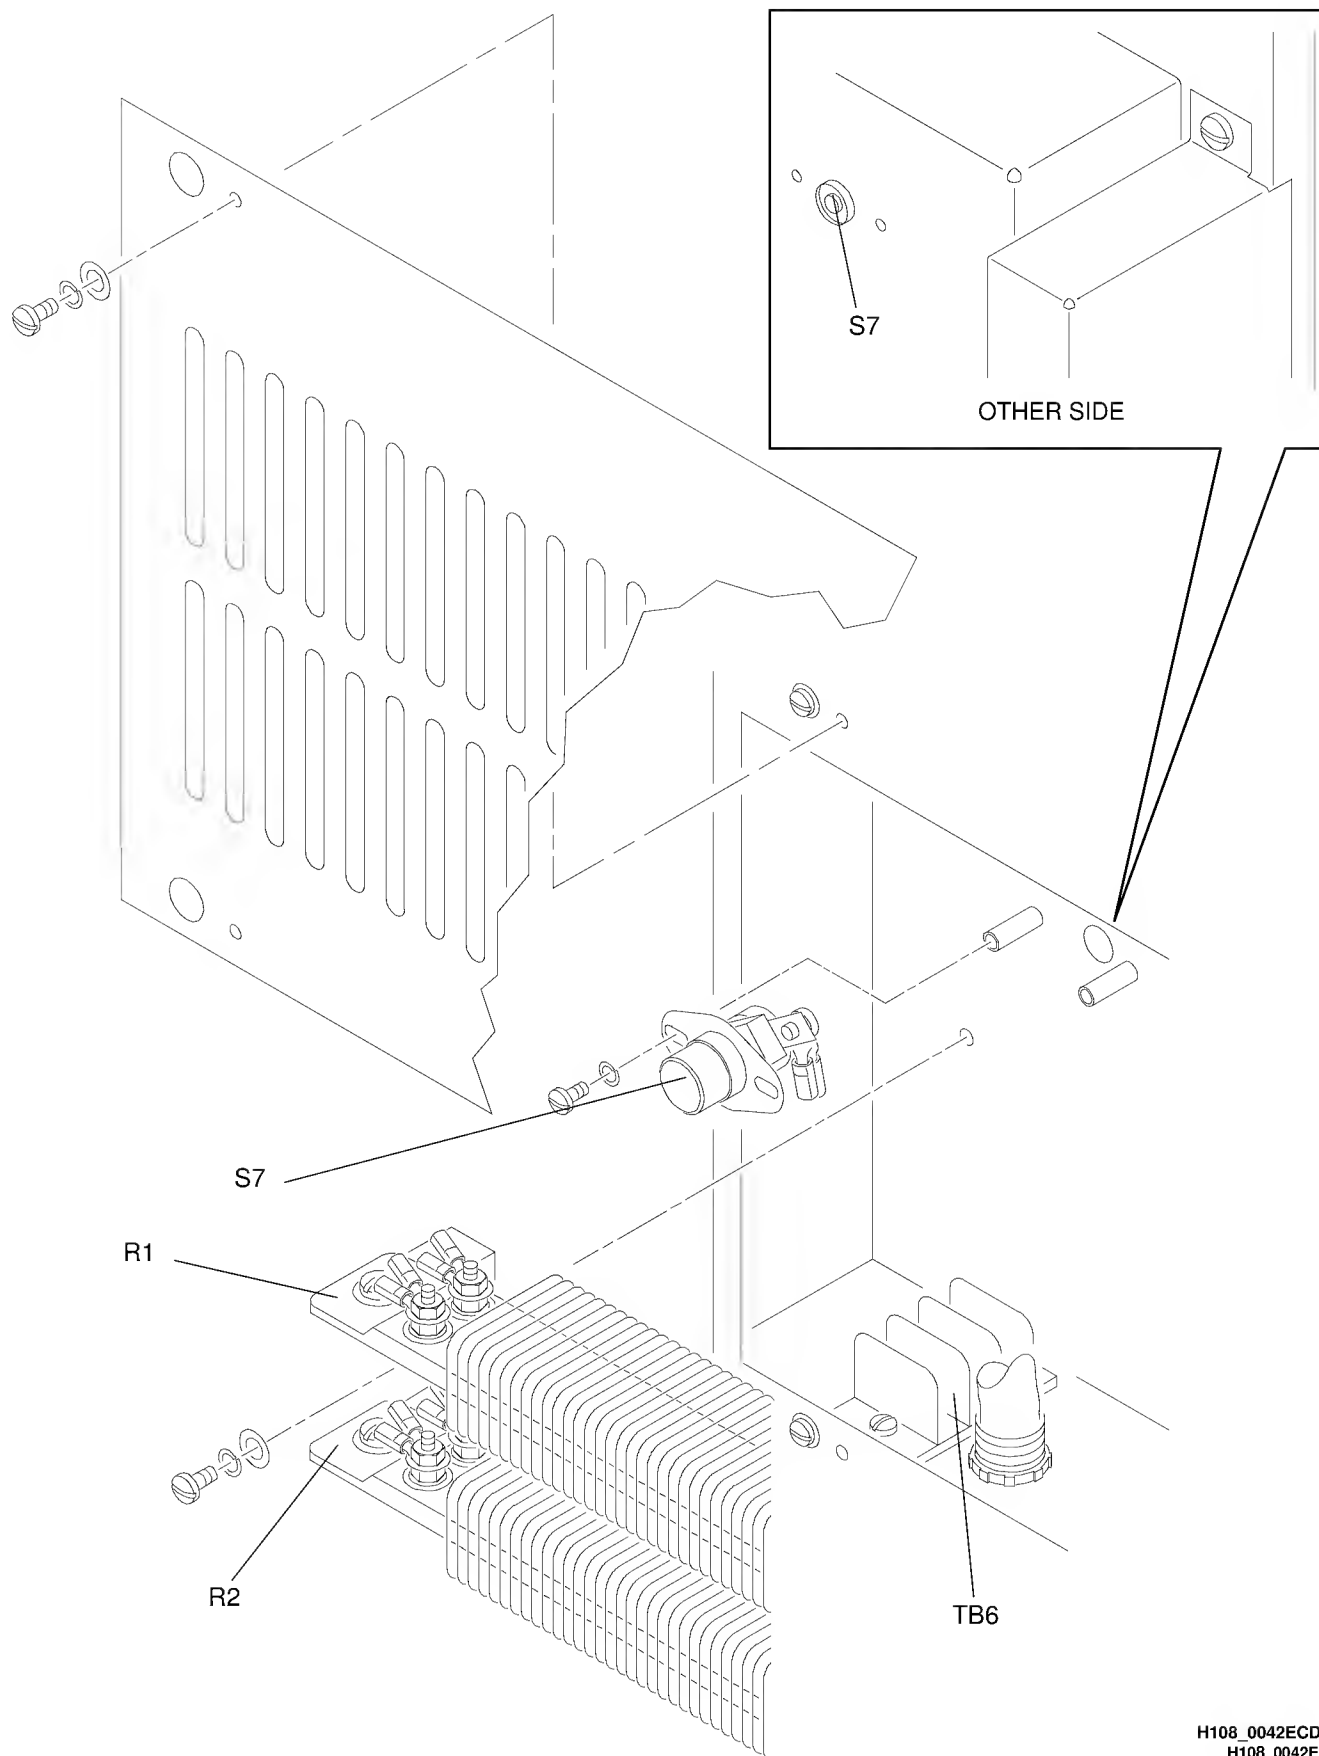

H108\_0042ECD  
H108\_0042EA

**Figure 14 Dryer Heater Assembly**

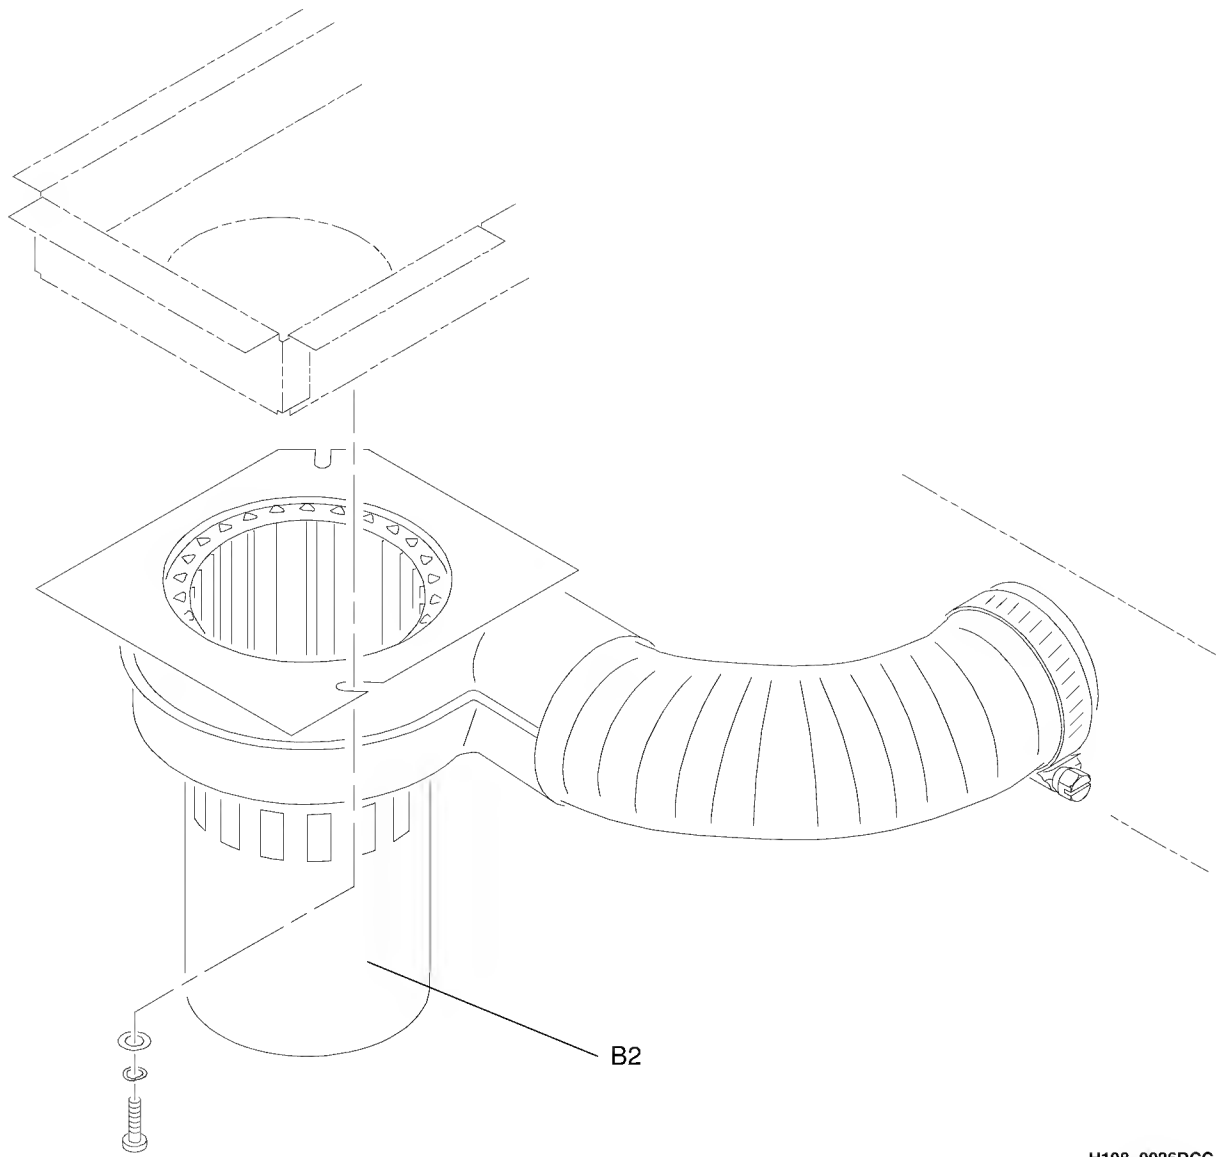

H108\_0026DCC  
H108\_0026DA

**Figure 15 Exhaust Fan Assembly**

3228dc\_b.txt

*Kodak and X-Omat are trademarks.*

Printed in USA

EASTMAN KODAK COMPANY • ROCHESTER, N.Y. 14650

**Health Sciences Division**

